



**51 11 000 Bumper — complete front:
removing and installing**

Unscrew attachment bolts left and right.
Installation instructions: Do not forget shim
between body and bumper.

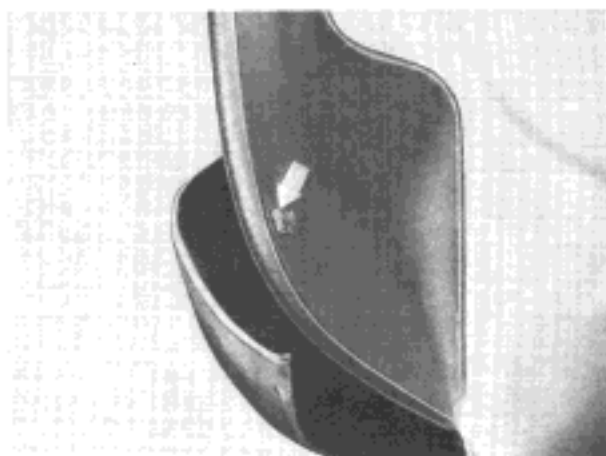


Unscrew bolt (1) and nut (2) on both sides
Remove bumper and overrider.
Installation instructions: Do not forget spacer piece (3).

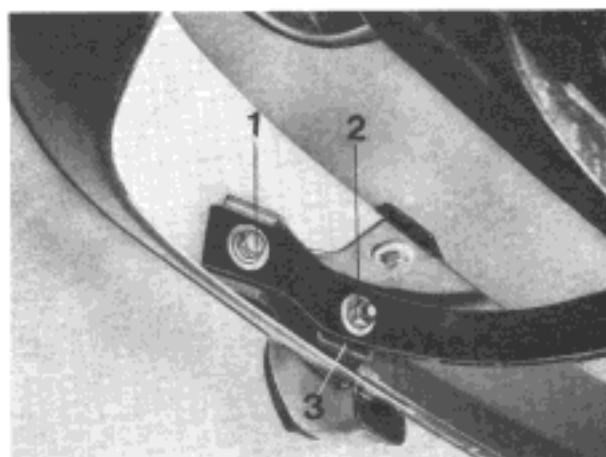


**51 11 011 Bumper — front centre section:
renewing**
— Overrider removed —


Unscrew bolt (1) and nut (2) at left and right
and remove centre section.
Installation instructions: Do not forget spacer
piece (4).

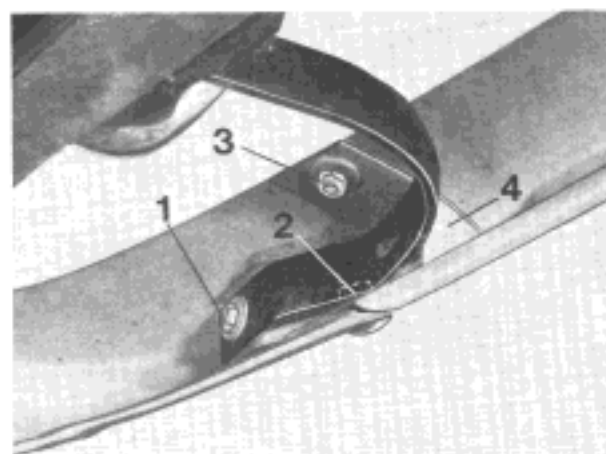

**51 11 121 Bumper — front wrap round section:
renewing**
— Overrider removed —

Unscrew attachment nut in wheel casing.

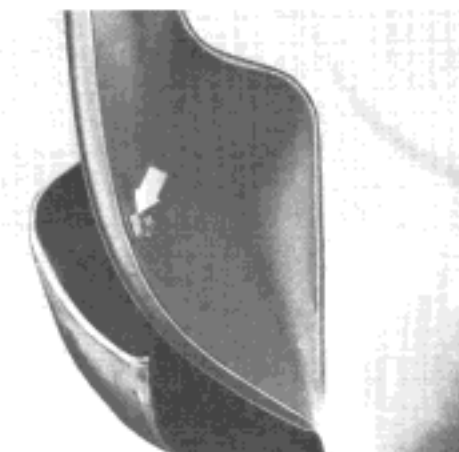


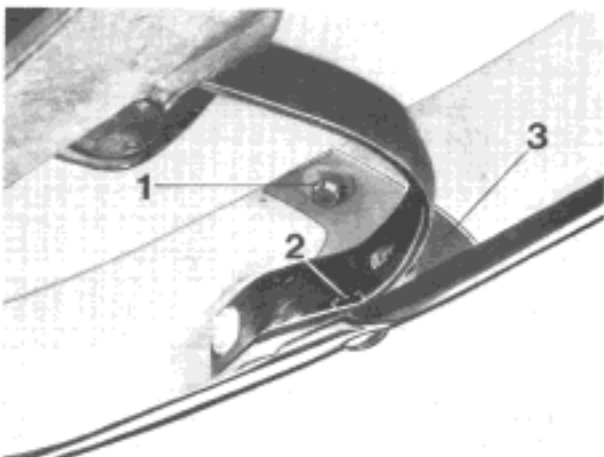

Unscrew nuts (1) and (2)


Remove wrap round section of bumper

Installation instructions: Do not forget spacer piece (3).

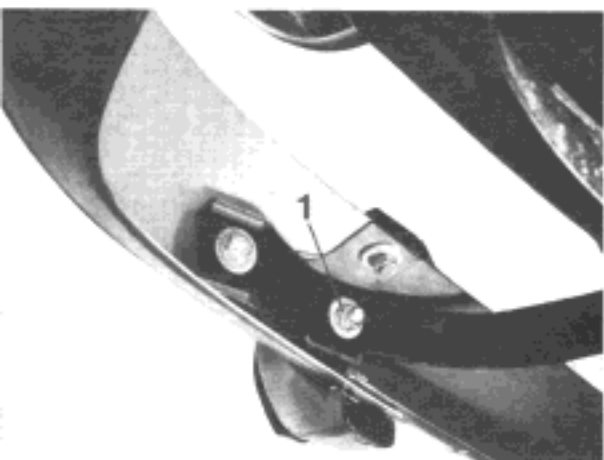


Unscrew nut (1)

Remove override.

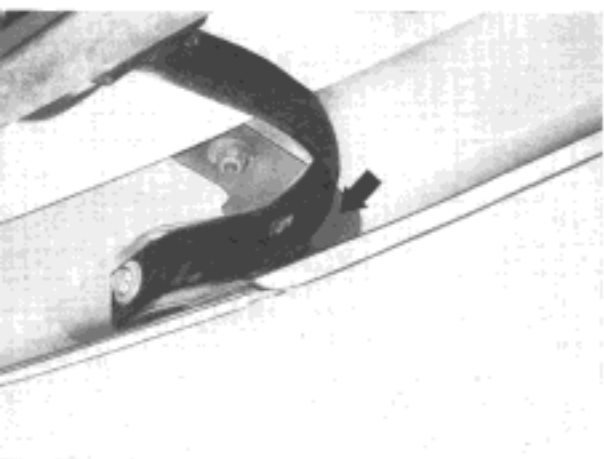

Installation instructions: Do not forget spacer piece.

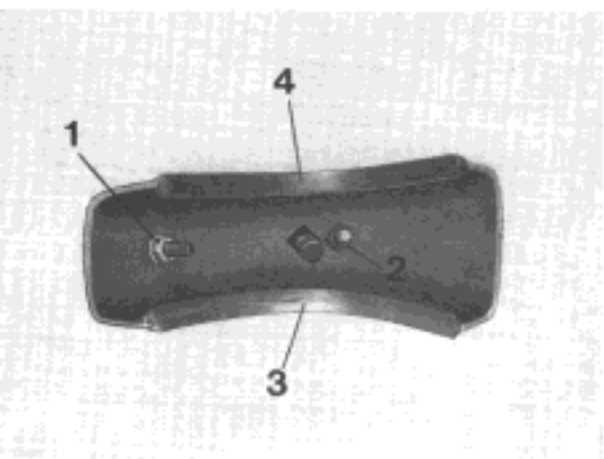


Unscrew nuts (1 and 2) and remove rubber pad.

Installation instructions: Ensure correct seating of underlay (3 and 4).




51 12 000 Bumper — complete rear: removing and installing


Removing luggage compartment floor panelling.
Unscrew attachment bolts right and left (1 → 3).
Removing and installing licence plate light 63 26 000.

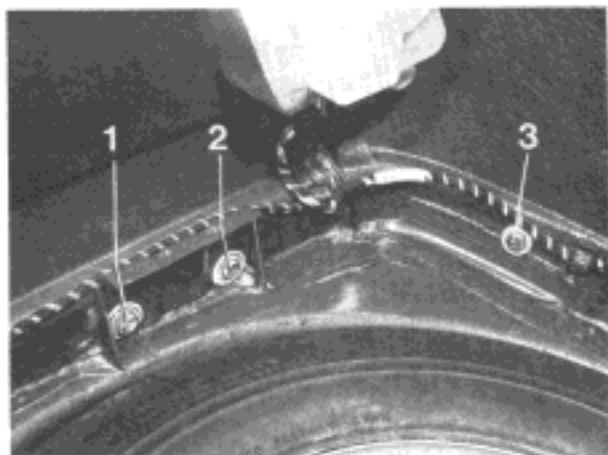

Installation instructions: Do not forget rubber spacer piece (1) between bumper and body.

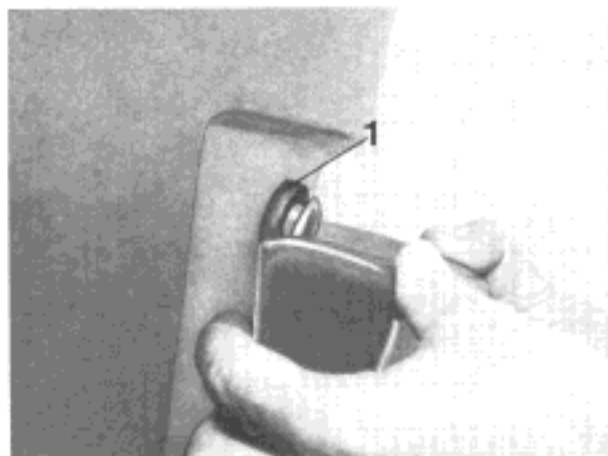


Installation instructions: Seal off attachment bolts between the body and underlay plates with sealing compound.

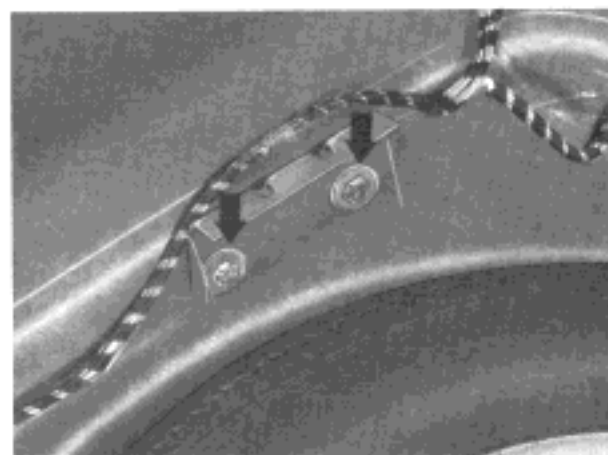


51 12 011 Bumper — rear centre section: renewing
— Bumper joint cover removed —

Removing and installing rear bumper 51 12 000.
Unscrew nuts (1 and 2) left and right.

Installation instructions: Ensure installation angle of spring bracket (3) in correct.

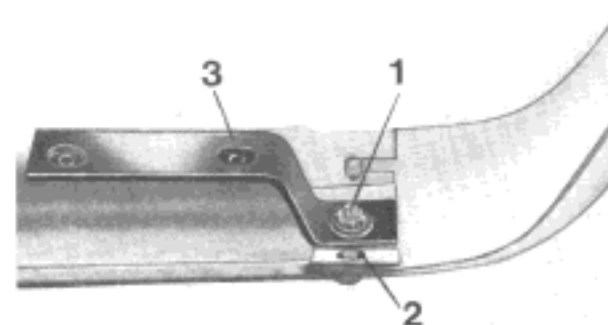


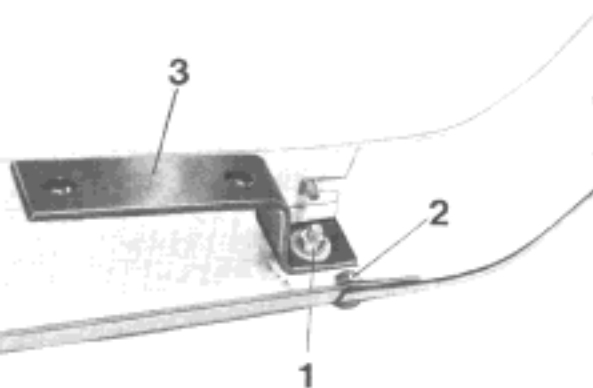

**51 12 201 Bumper — rear wrap-round section:
renewing**
— Bumper joint cover removed —

Removing and installing complete rear bumper
51 12 000.


Installation instructions: Ensure installation angle
of spring bracket (3) is correct.

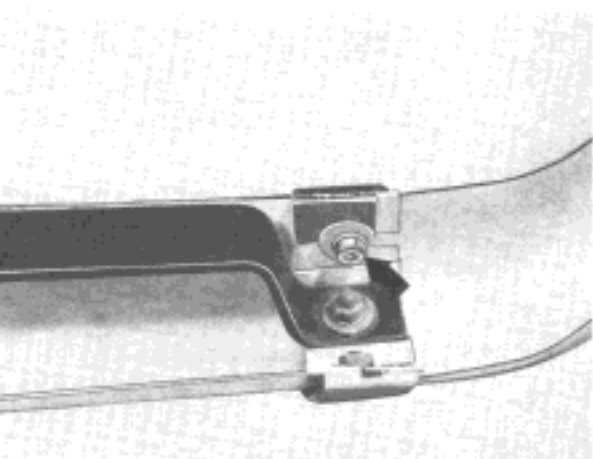

51 12 301 Bumper rear joint cover: renewing

Removing and installing complete rear bumper
51 12 000.

Unscrew nuts.

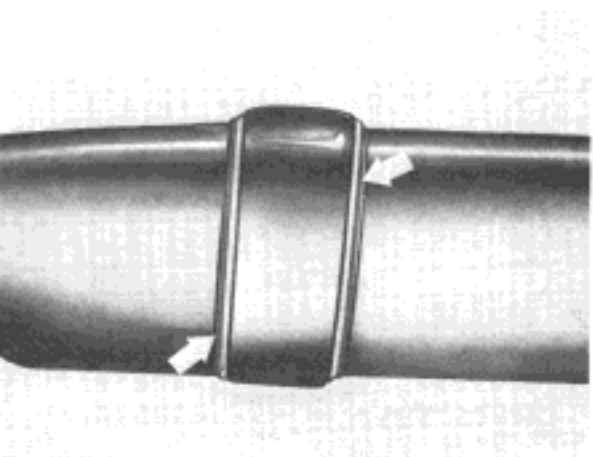

Installation instructions: Ensure correct seating of
underlays.

